


FRANK'S CANE & RUSH SUPPLY
7252 Heil Avenue
Huntington Beach, CA 92647
Phone (714)847-0707 ~ Fax (714)843-5645
Email: orders@frcrs.com
Website: www.franksupply.com

Shop Notes: Cabinet Door Caning

- 1) Soak cane 2 hours in tap water before application.
- 2) Staple wet cane in back with a stop.
- 3) Apply finish when thoroughly dry.

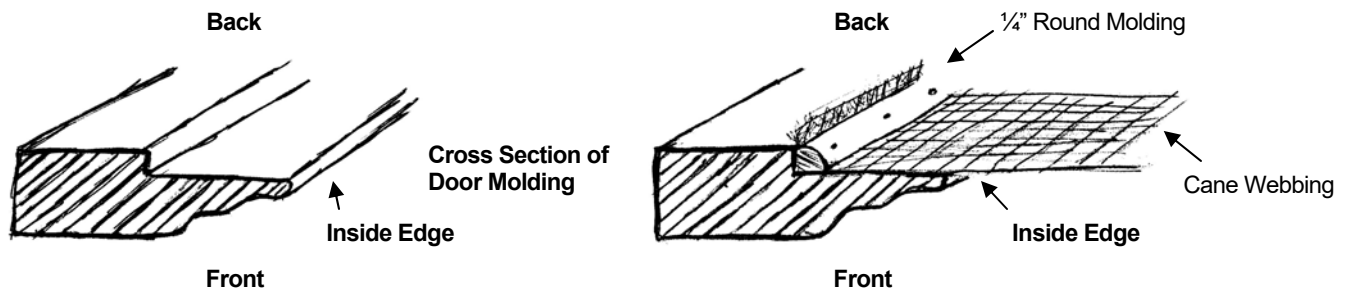

Tips and Suggestions:

- Finish the cane webbing like wood – experiment on your scrap first.
- Cut cane on back of door panel after drying overnight.
- Do not touch until completely dry, as you may loosen your job.
- Also use white glue under 1/4\" round stop – staple or pin the nail stop in place when cane is wet.

Call for details and tips for your job.